

It is usually possible to adjust the position of the face plates by lightly tapping the top or bottom edge of the face plates with a plastic or wooden mallet. However, if the face plates do not move when tapped, you can loosen the mounting screws as described below to adjust the face plates.

If the right face plate needs to be adjusted, you must first remove the left face plate. Begin by laying the fence on the table with the left face plate facing down. You can access the screws for the left face plate through the slots on the bottom of the fence. Insert a ball end hex wrench through the slot at the end of the fence and into the screw head. See Fig. 15. Loosen the screw but do not unthread it completely. Continue this process with each slot/screw pair. It may be helpful to shine a flashlight down the end of the tube to illuminate the screw heads. Once all the screws are loosened push the face downward to align the screw heads with the large portion of the key-hole slots, and then pull the face plate off the fence.

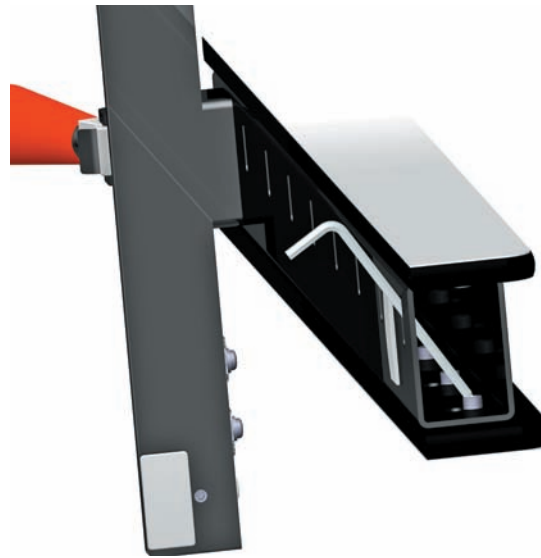


Fig. 15

Once the left face plate has been removed, you can access the screws for the right face plate through the key-hole slots for the left face plate. See Fig. 16. Loosen each screw in the right face plate just enough to allow the face plate to slide against the fence. Install the fence on the main tube and position the right face plate as desired, making sure to leave at least a small gap between the bottom of the face plate and the table so the face plate does not drag on the table.

Next, lift the fence off the tube and place it on the table with the right face plate facing down. Make sure not to move the face plate from the position you set it. If necessary you can clamp the face plate to the fence to keep the face plate from moving. Tighten each screw to lock the right face plate in position. ***Make sure not to over-tighten these screws as it that may cause a slight concavity in the surface of the face plate near the screw.***

Replace the left face plate onto the fence and install the fence on the main tube. Adjust the position of the left face plate as desired. Lift the fence off the tube and set it on the table with the left face plate down, making sure the position of the face plate doesn't move. Tighten the screws to lock the left face plate onto the fence. Your fence is now fully adjusted and ready to use.

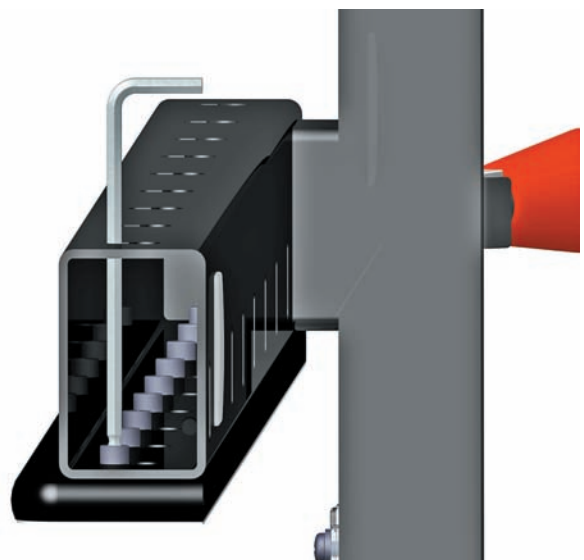


Fig. 16